

## Enable\_16MB\_RAM\_on\_WRT54GS\_v5

It is possible to enable the other half of the RAM on a [WRT54GS](#) v5 series router running DD-WRT.

```
nvramp set sdram_init=0x0A  
nvramp set sdram_ncdl=0  
nvramp commit  
reboot
```

This action is only valid for [WRT54GS](#) v5, v5.1, and v6 routers! mig's report of this working on the WRT54GS v5.1 is here: [See His Post](#)

## External Links

- [Forum post](#)
- [WRT54G v5+ flashing page](#)