

[English](#) • [Deutsch](#) • [Español](#) • [Français](#) • [Italiano](#) • [???](#) • [Polski](#) • [Português](#) • [??????](#) • [Svenska](#) • [???\(???\)?](#) • [???\(???\)?](#) •

Contents

- [1 For the WRT54G v5, v5.1, and v6 ONLY](#)
- [2 For the WRT54GS v5, v5.1 and v6 ONLY](#)
- [3 Links to v5 and v6 Flash Instructions](#)
- [4 Enable 16 MB RAM](#)

For the WRT54G v5, v5.1, and v6 ONLY

<http://www.dd-wrt.com>[http://wiki.dd-wrt.com/wiki/index.php/Linksys_WRT54G/GL/GS/GX#v5 and v6](http://wiki.dd-wrt.com/wiki/index.php/Linksys_WRT54G/GL/GS/GX#v5_and_v6)

For the WRT54GS v5, v5.1 and v6 ONLY

SERIOUS WARNING -- NO REVERSION TO VXWORKS ON THESE UNITS: At the moment for WRT54GS units this is a one way operation. No reversion back to VxWorks is available. I never got around to creating the GS reversion firmware. It could EASILY be created by someone using the tools I've written and the documentation here. A person once sent me a GS router hoping I might, but I didn't get to it and now no longer have that router. If someone would like to send me another GS unit, I will maybe get around to creating the reversion firmware. Also, if you'd like to donate other routers, feel free. Note that I make absolutely no guarantees that I'll complete anything though.

Copied from Bitsum

<http://www.dd-wrt.com>[http://wiki.dd-wrt.com/wiki/index.php/Linksys_WRT54G/GL/GS/GX#v5 and v6 2](http://wiki.dd-wrt.com/wiki/index.php/Linksys_WRT54G/GL/GS/GX#v5_and_v6_2)

Links to v5 and v6 Flash Instructions

<http://www.bitsum.com/openwiking/owbase/ow.asp?WRT54G5%5FCFE>
<http://www.scorpiontek.org/portal/content/view/27/36>

Enable 16 MB RAM

ATTENTION: WRT54gS ONLY!!!! Doing this in your WRT54G will BRICK your router!

See [Enable 16MB RAM on WRT54GS v5](#)