

Settings

Multiple links on this site refer to important settings required for a successful flash. See the [Glossary](#) for unfamiliar terms. Also, wireless settings are described here: [Basic Wireless Settings](#) and here: [Advanced Wireless Settings](#).

Disable Wireless

1. You must disable wireless during almost any firmware upgrades. Simply logging off your wireless will not work.
 1. Go to Network Connections (Vista: Control Panel->Network and Internet -> Network Connections).
 2. Double click on Wireless Internet Connection and hit Disable at the bottom of the screen.