

## Talk:IRC\_channel

i am upgrading a wrt54g v6.0 (firmware v1.02.8) step 11 says,..."Enter "root" as the username and "admin" as the password...." and it has no ability to change the username to root am i just being stupid?... is it not there? anyhow, can i just leave it as "admin" and upgrade with the new password of admin... or will this cause a problem during upgrade?