

Need an explanation of the MMC option. --[69.12.132.55](#) 03:16, 17 Oct 2005 (CEST)

MMC?

Please explain MMC storage option.

/etc/ipkg.conf

The article mentions changing you /etc/ipkg.conf file to point to different repositories, but every time I try to do this, I'm told that it is read-only [66.212.213.178](#) 22:37, 12 Mar 2006 (CET)

Found this code: "rm /etc/ipkg.conf" "cp /rom/etc/ipkg.conf /etc/ipkg.conf" "vim /etc/ipkg.conf" in the openwrt wiki, but it doesn't work with dd-wrt (you're told you can't remove the file) [66.212.196.86](#) 01:15, 30 Mar 2006 (CEST)

You can adjust the directory for ipkg via **export IPKG_CONF_DIR=/mnt/etc** --[Svanzoest](#) 03:41, 13 June 2009 (CEST)